

NX100 Firmware Upgrade guide (Ver. 01.10)

1. Before upgrading the firmware

 
- Make sure you use fully charged batteries.
If camera malfunction is caused during a firmware upgrade for the reasons given above, the mainboard may have to be serviced by a Samsung service centre, which may result in major repair charges.
- Before upgrading the firmware, make sure that you format the memory card on your PC or camera and then download the necessary firmware file.
- Download the firmware file into the root directory of the memory card.
- Do not operate the camera, remove the batteries, or cut the power while upgrading firmware. Operate the camera only after the firmware upgrade is complete.

2. Improvement

- 1) Add panorama function inside the Scene mode.
- 2) Compatible with 18-55(II), 50-200(II) 18-200 mm i-function lens (Add OIS menu)
- 3) Improved Movie clip algorithm, AF function improved at low contrast.
- 4) Changed default setting of movie clip AF mode: CAF

2. How to upgrade firmware?


- 1) Download the firmware file into the root directory of the SD memory card.

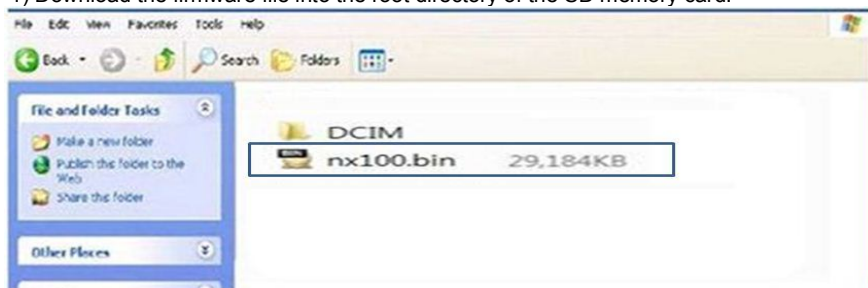


- 2) Insert the SD card on which the firmware file is to be saved.

- 3) Press the menu button.

 - 4) Move to "Setup Menu 3" (Press the left button of 4-way key.)

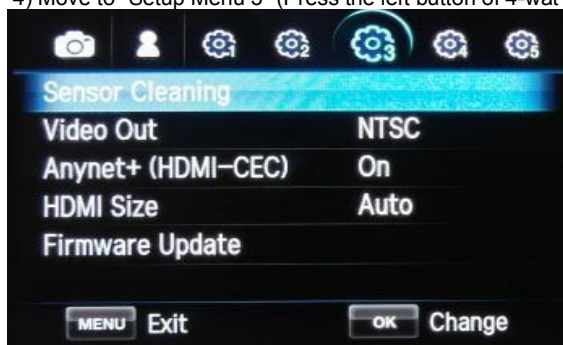

 - 5) Select the "Firmware Update"
(After pressing the left button of 4-way key, press the OK button for 1 time.)

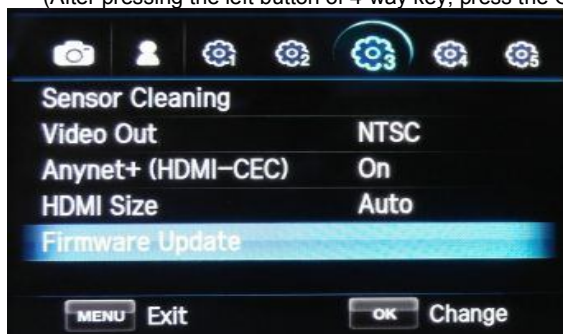

- 6) Select the "Body Firmware". (Press the OK button for 1 time)



7) Select "Yes". (After pressing the down button of 4-way key, press the OK button for 1 time.)



※[Current version(?? ??)] → [Upgrade version(01.10)]

The current version may differ for each cameras based on sales region.

8) The upgrading progress bar will be increased, then after finishing it, camera will turn off



※ Should you need further detailed information, or if you experience difficulty in upgrading firmware, do not proceed with the process on your own. Visit a Samsung service centre near you.